


1


Hook chains to the lifting points to support the unit

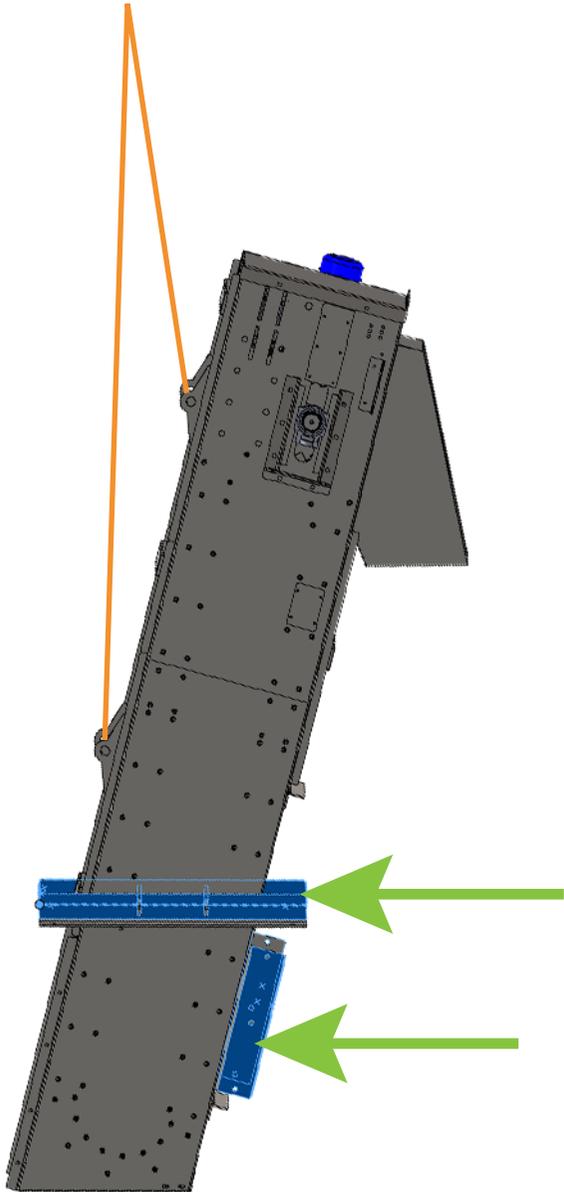

Unbolt supports

2


Tilt the unit up to 0 °

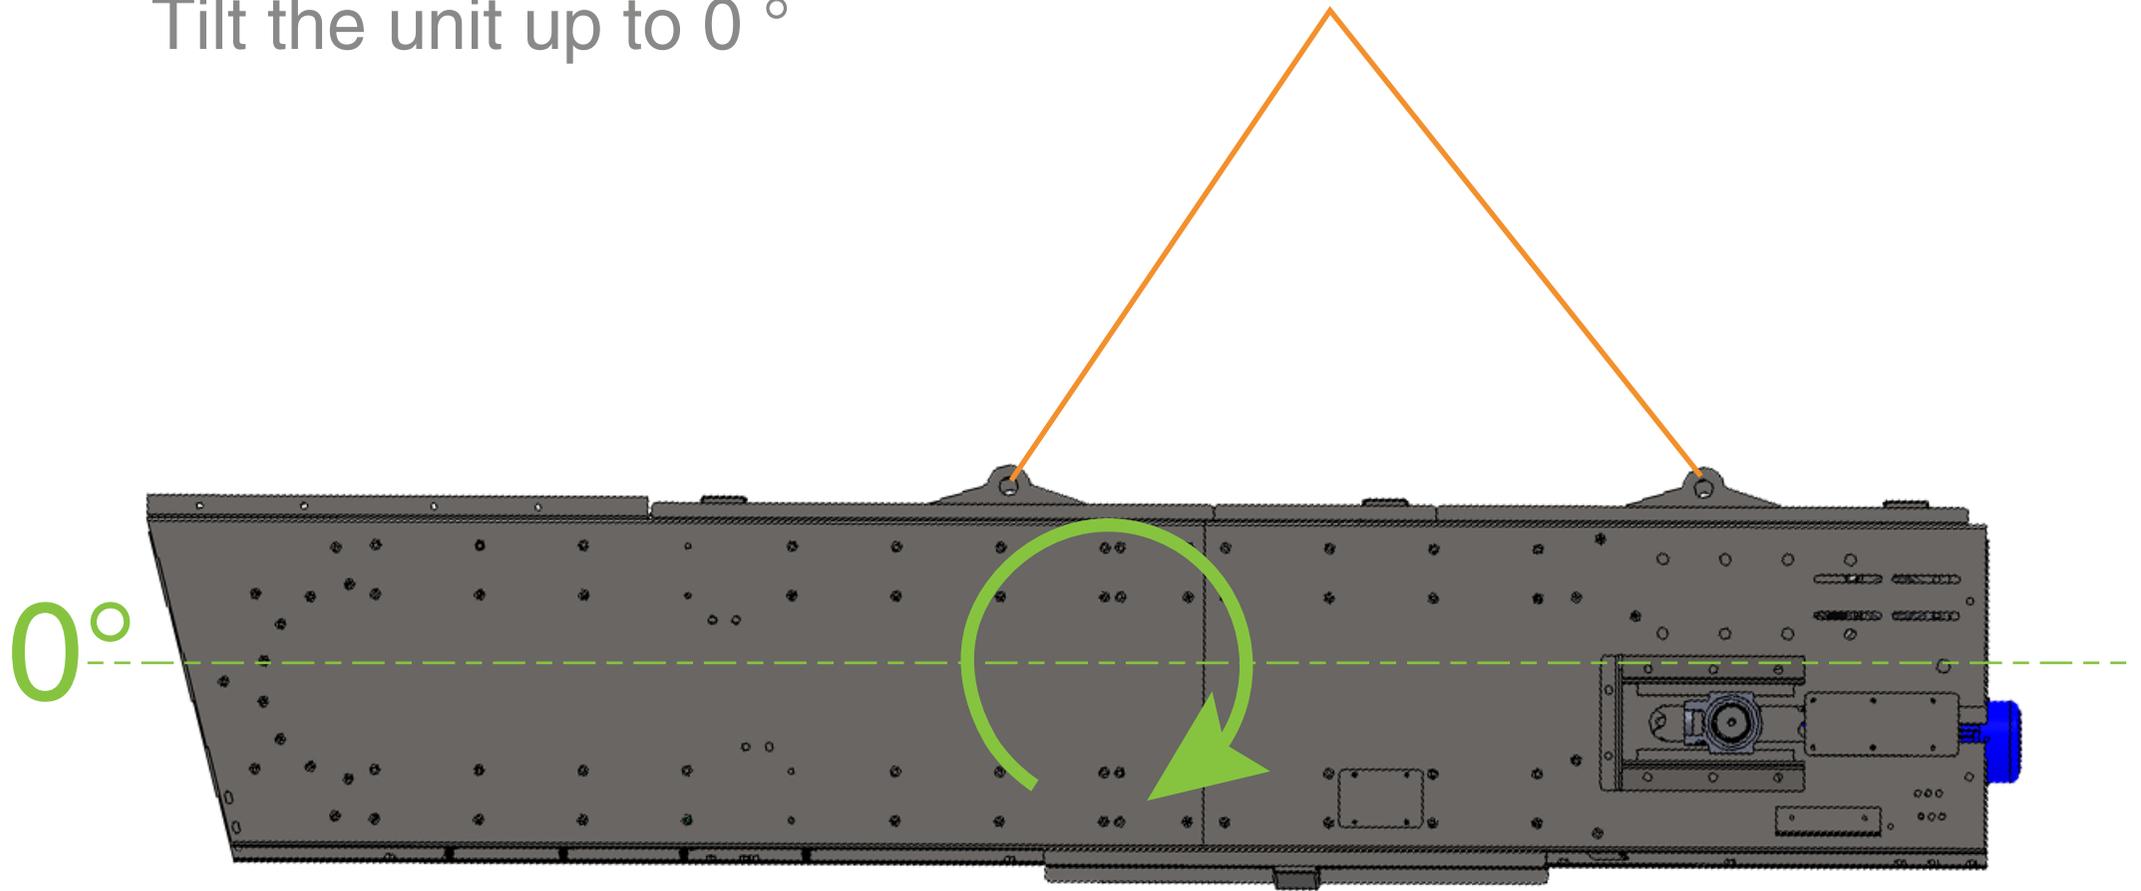

Keep the unit horizontally throughout the conversion procedure


3

Remove covers

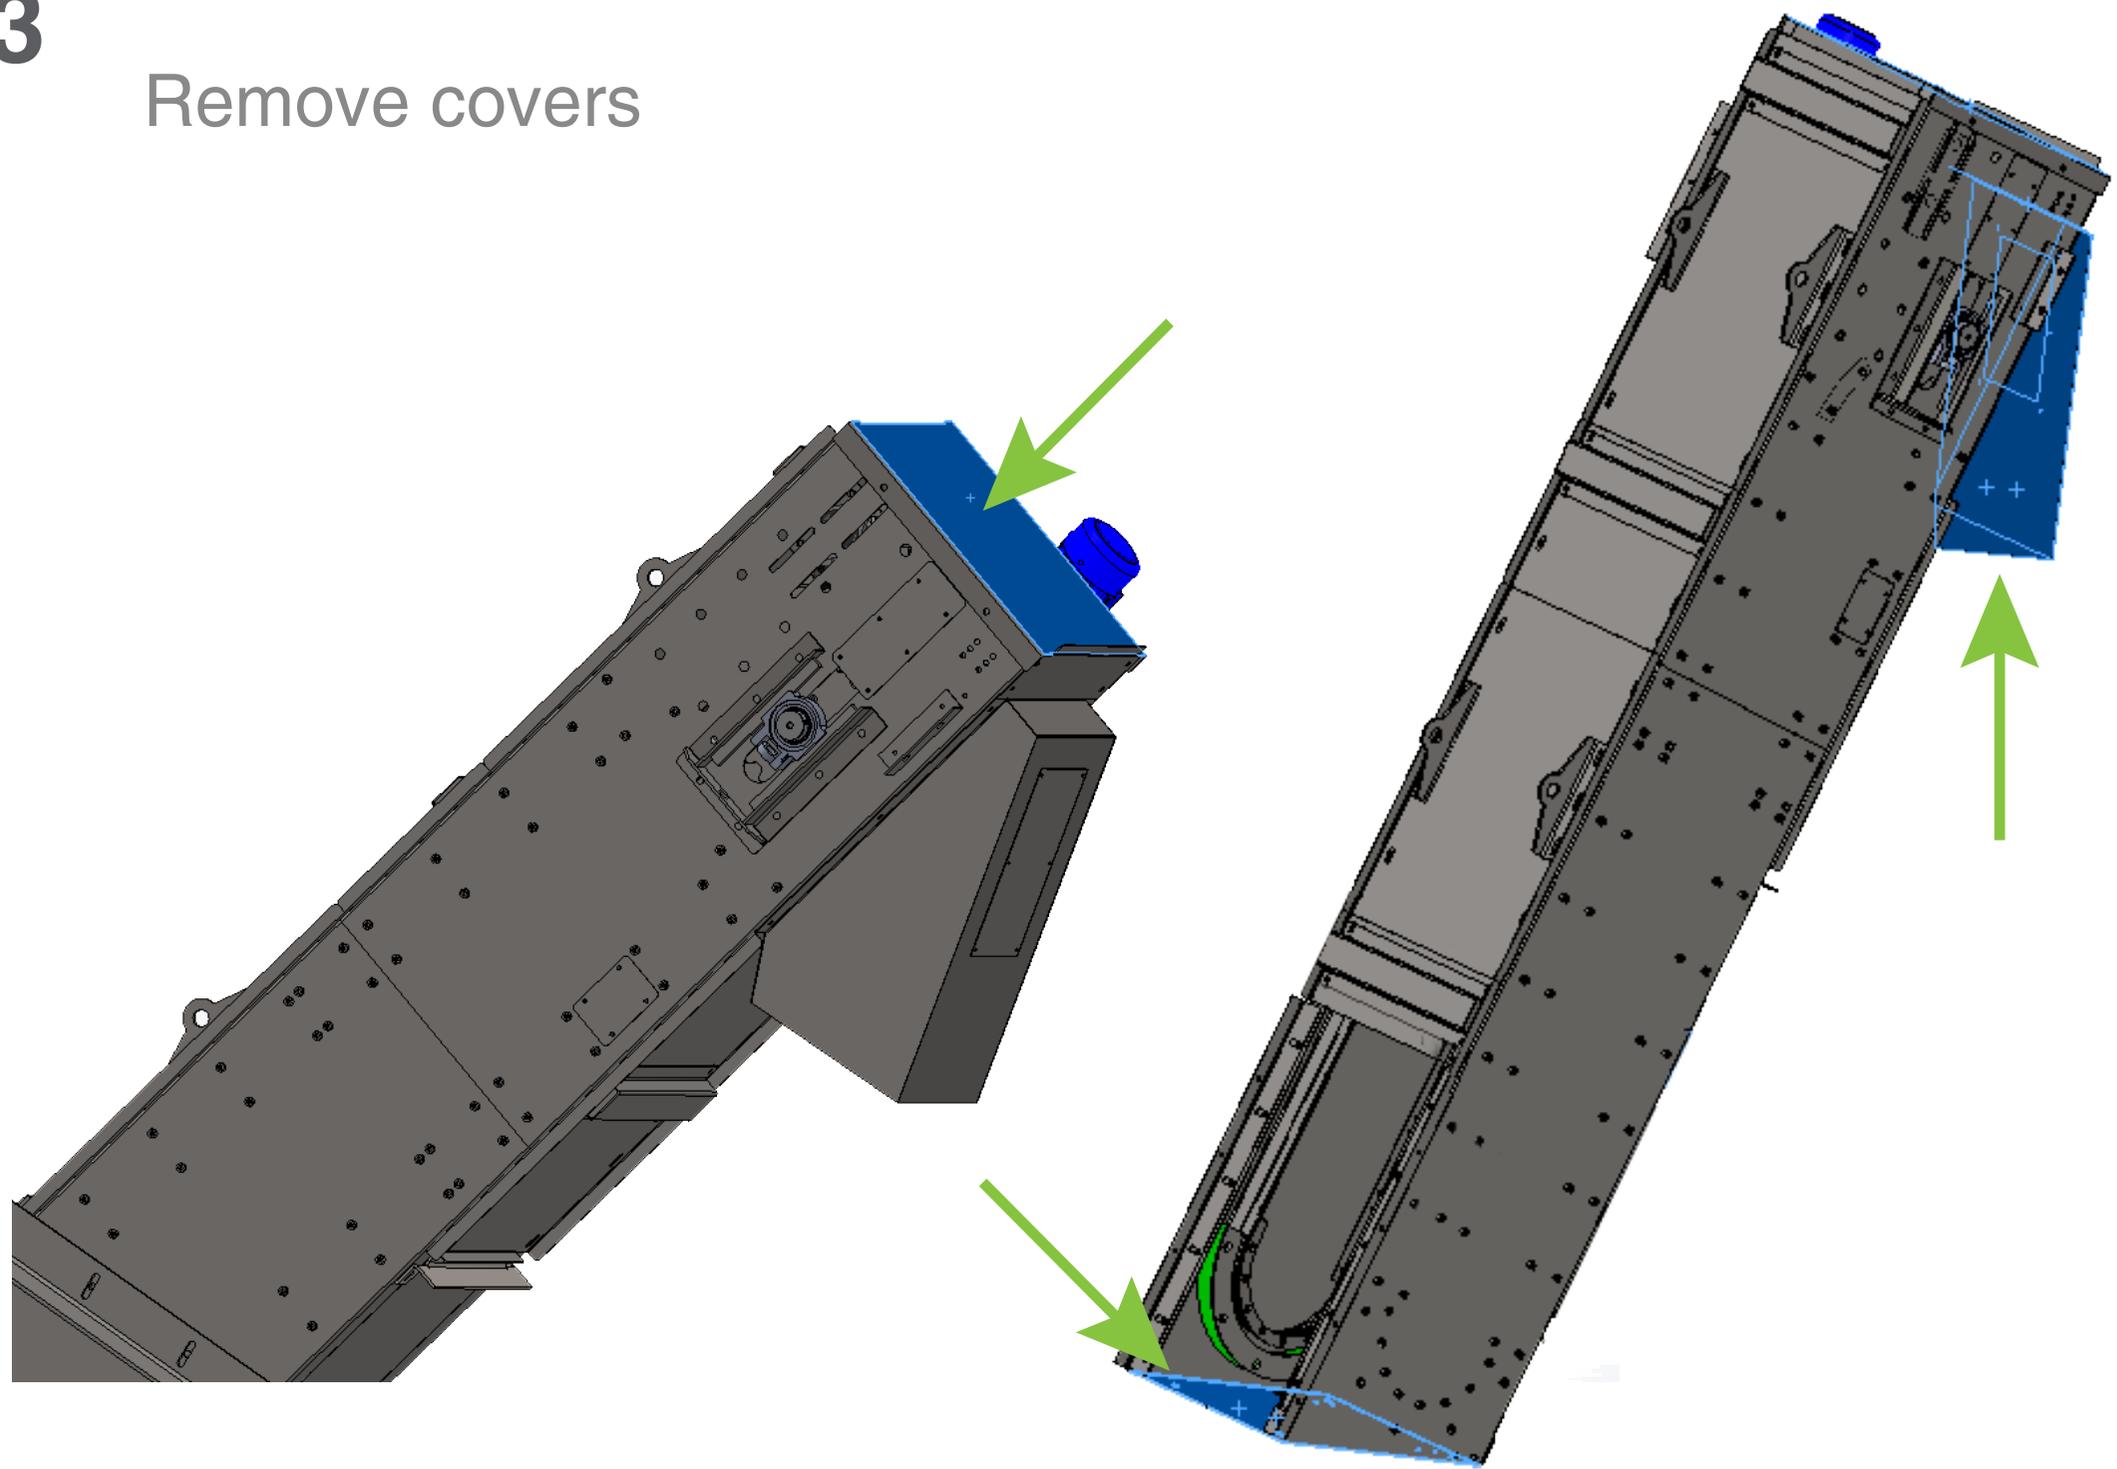


4

Remove the perforated plate

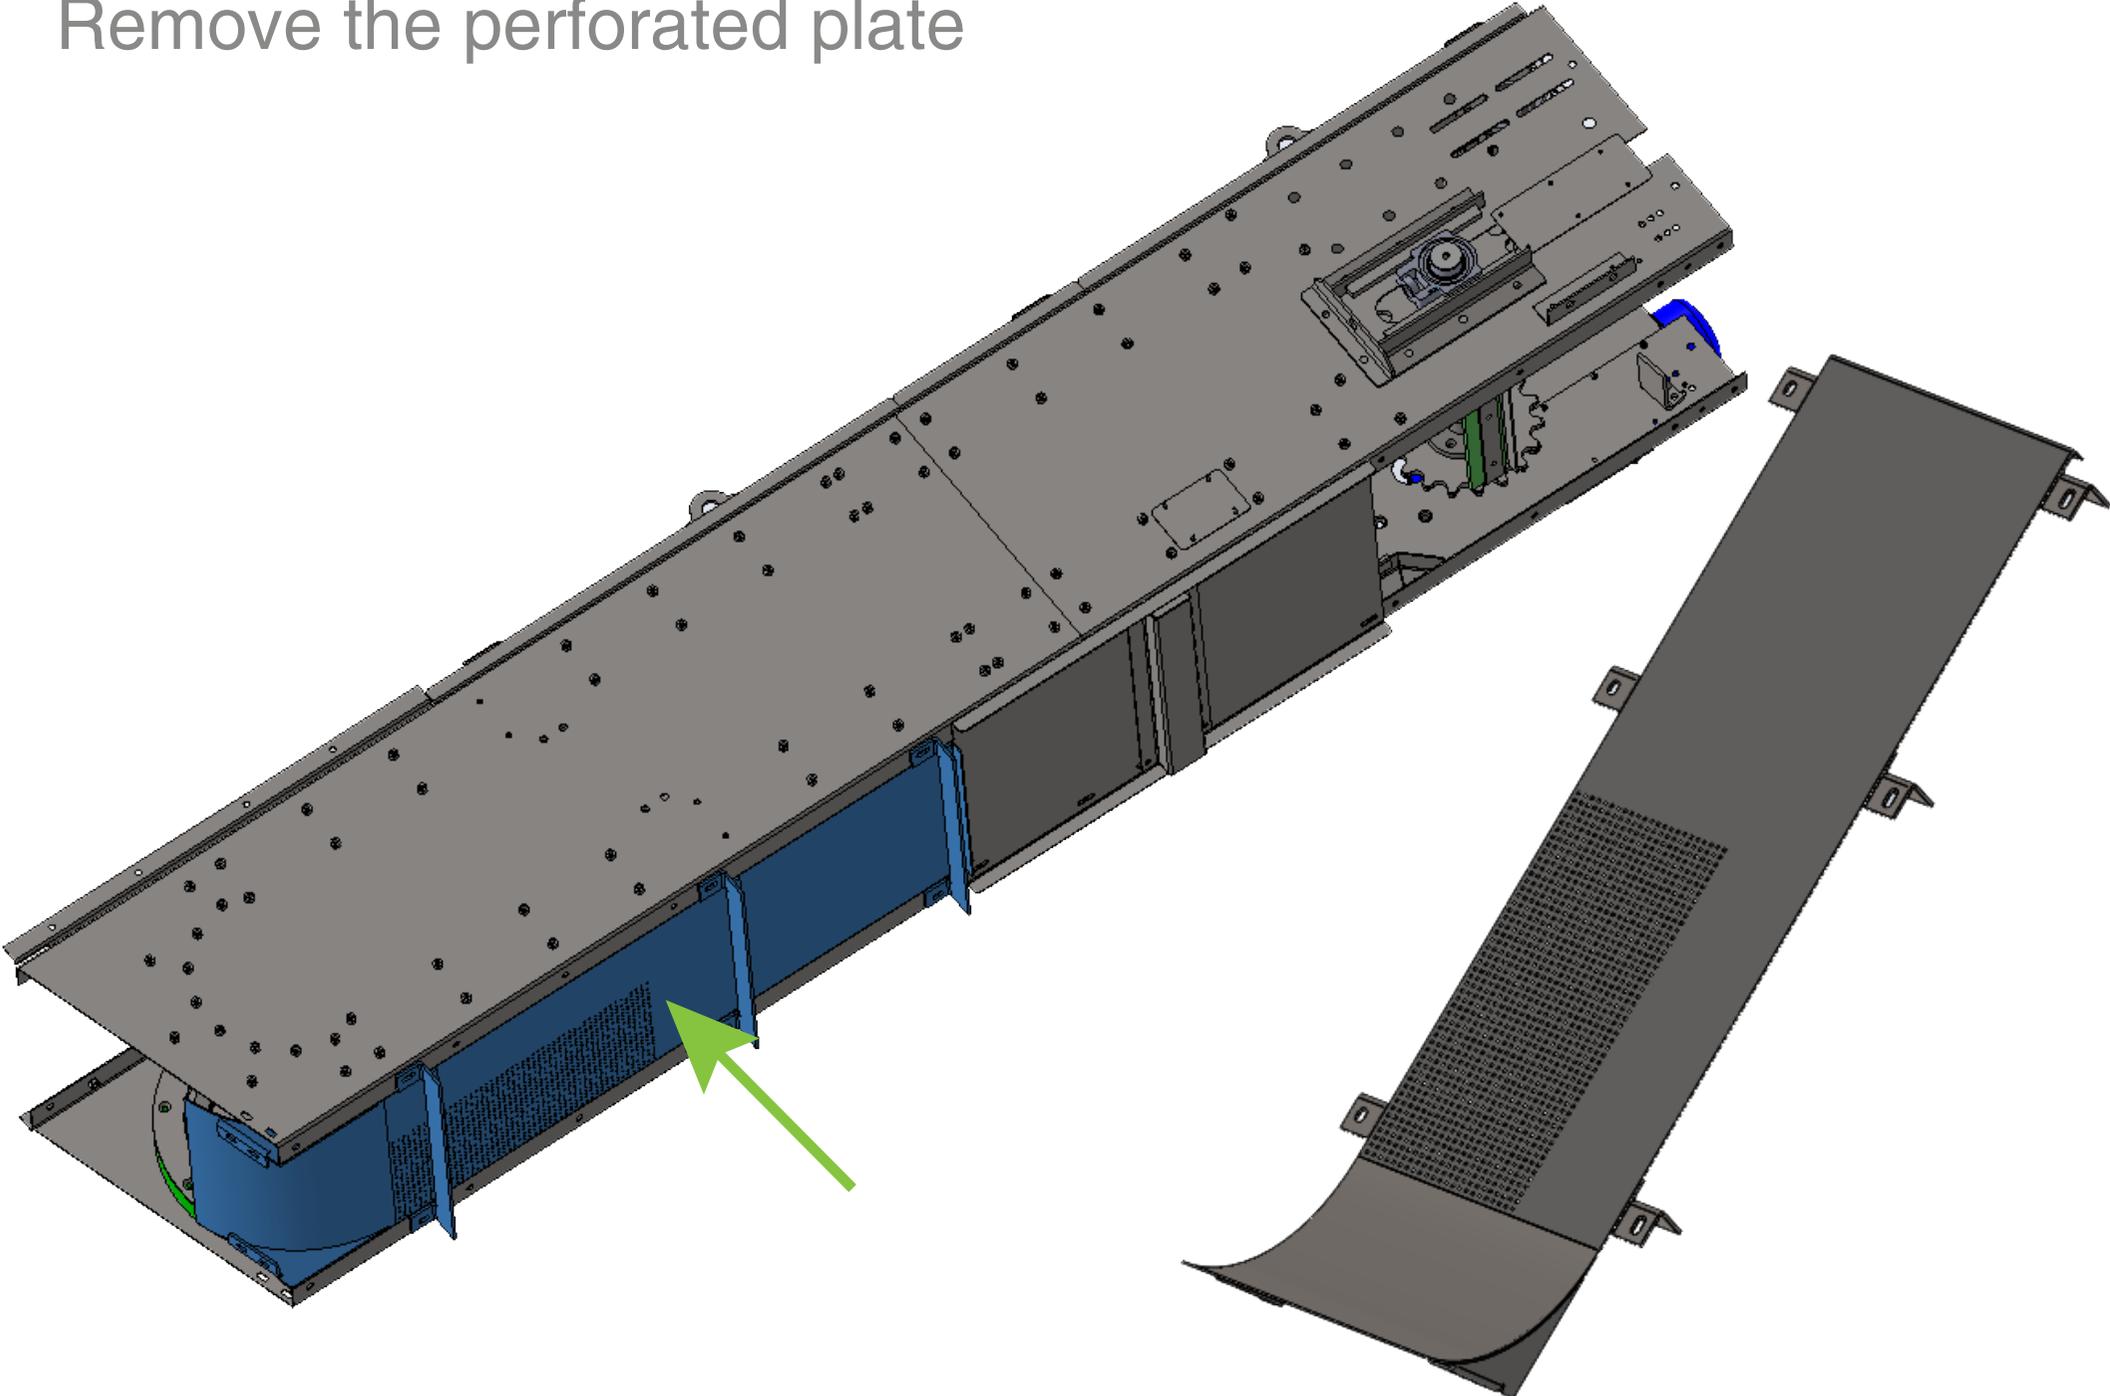


5

Remove the cover as indicated

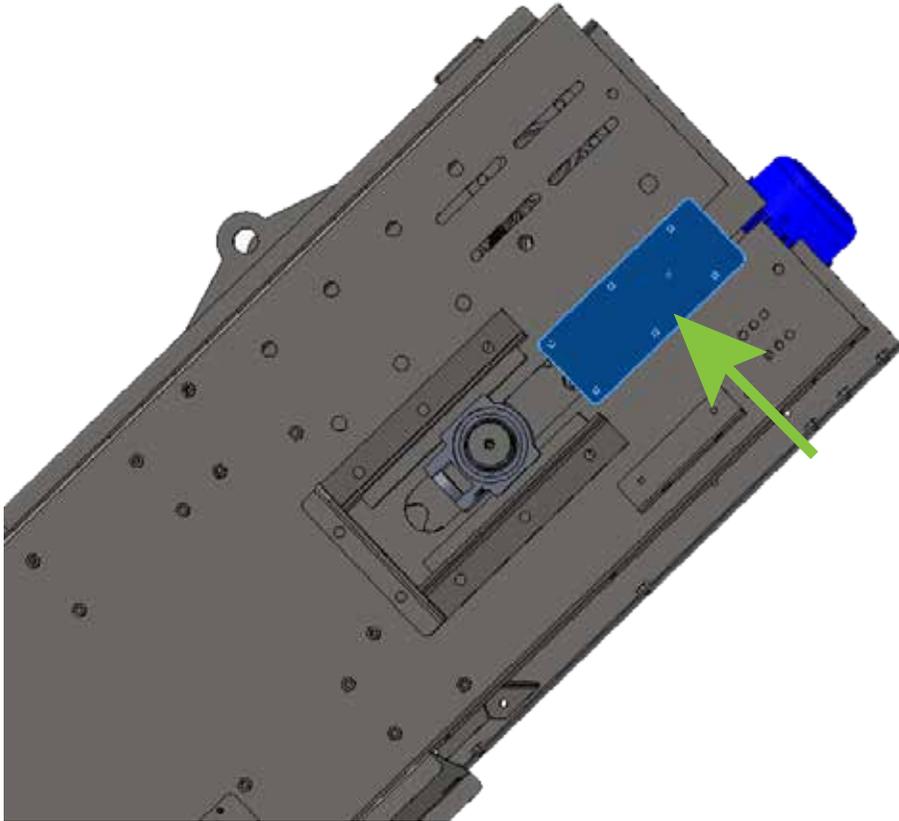


6

Remove the entire paddle brush cleaner



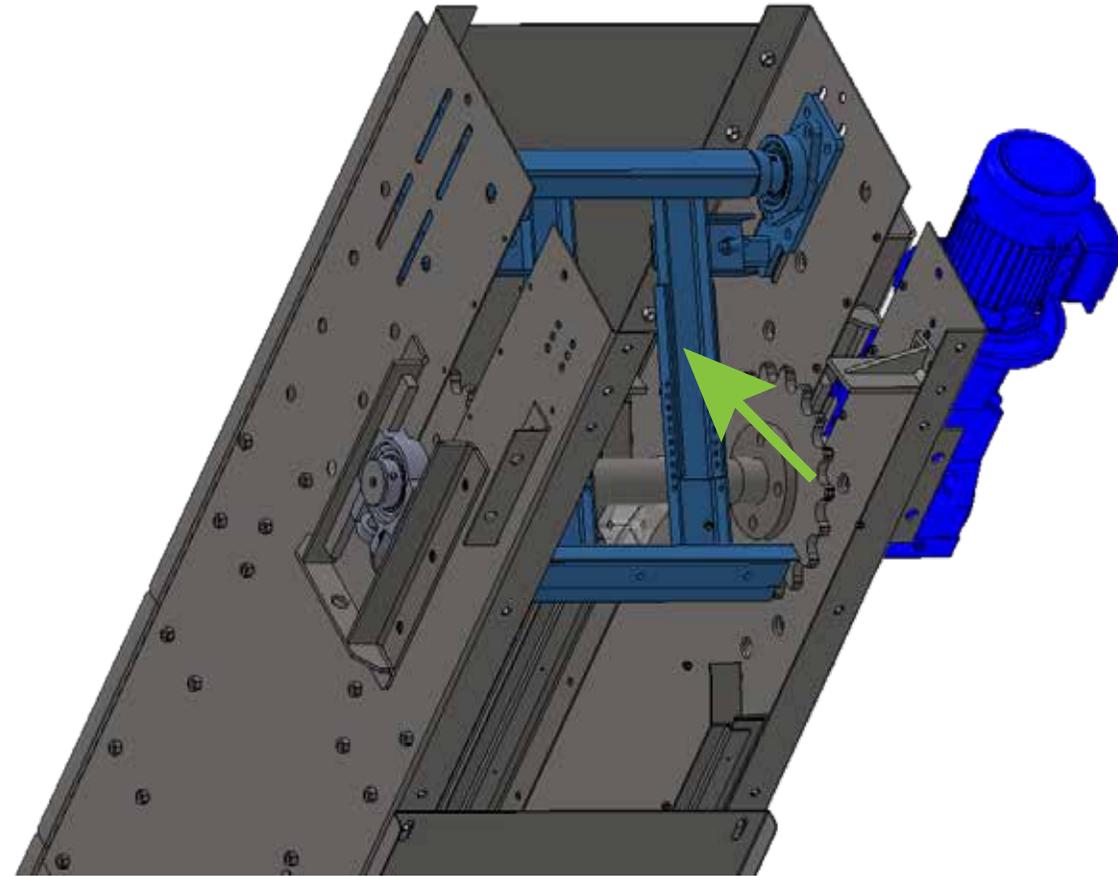


7

Connect the motor and rotate it to bring each brush to the height of the covers just removed (see 5)

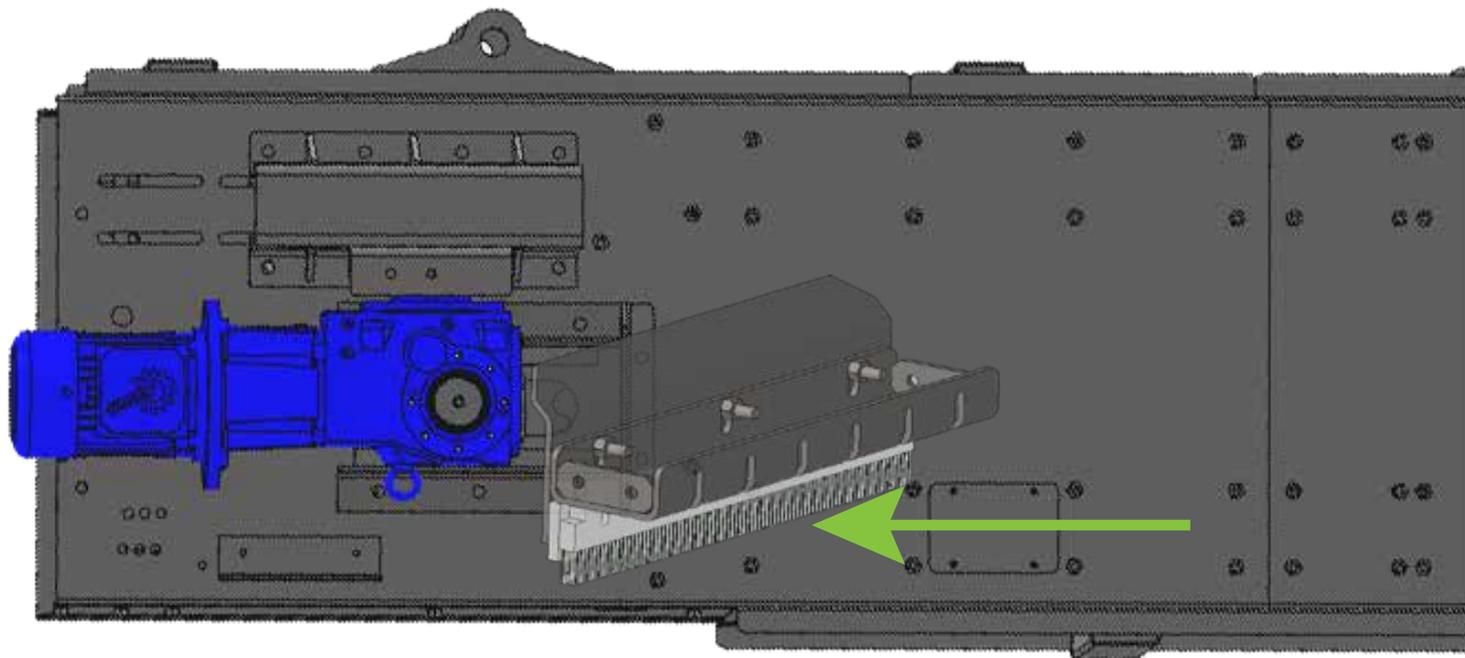


Be sure to install 4 spacers for each rake

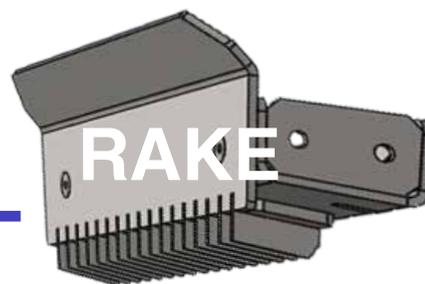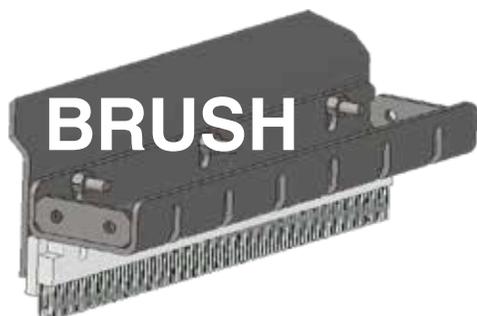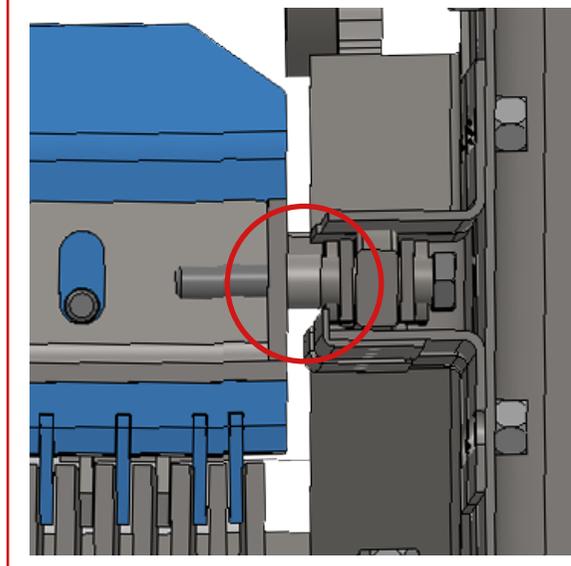

Once the brushes have been disassembled, mount the combs, note the direction. Also don't forget to fit the 4 spacer bushings.


8

Connect the motor and rotate it to bring each brush to the height of the covers just removed (see 5)

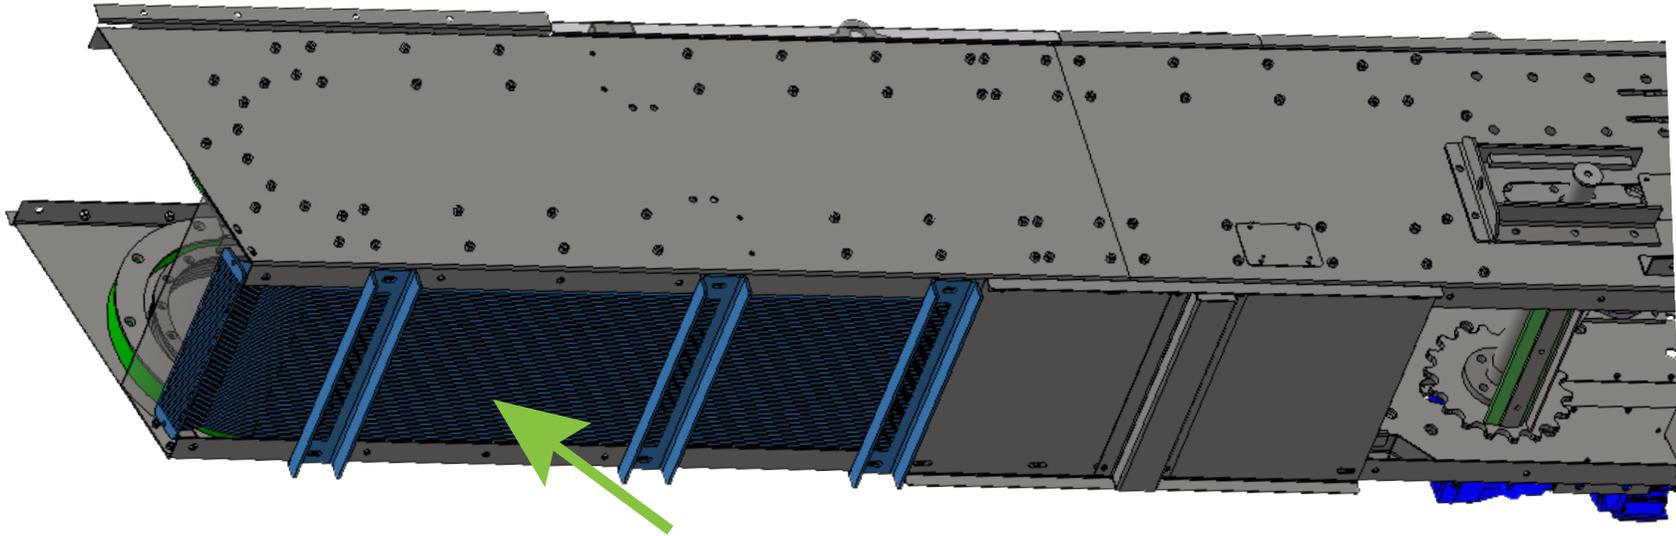


9

Install the stone guard

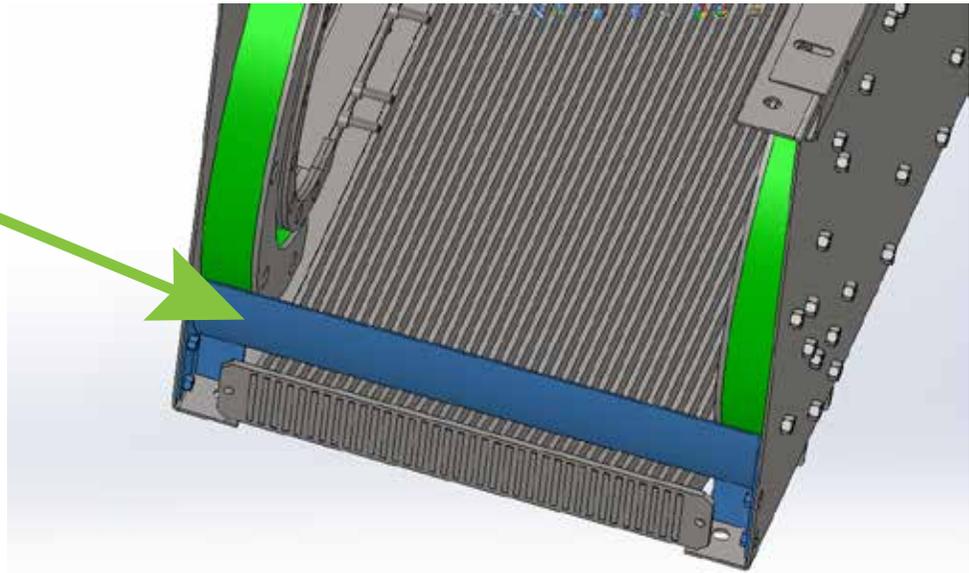


- 10** Make sure that every time a rake enters the screening area it is well calibrated and does not collide.

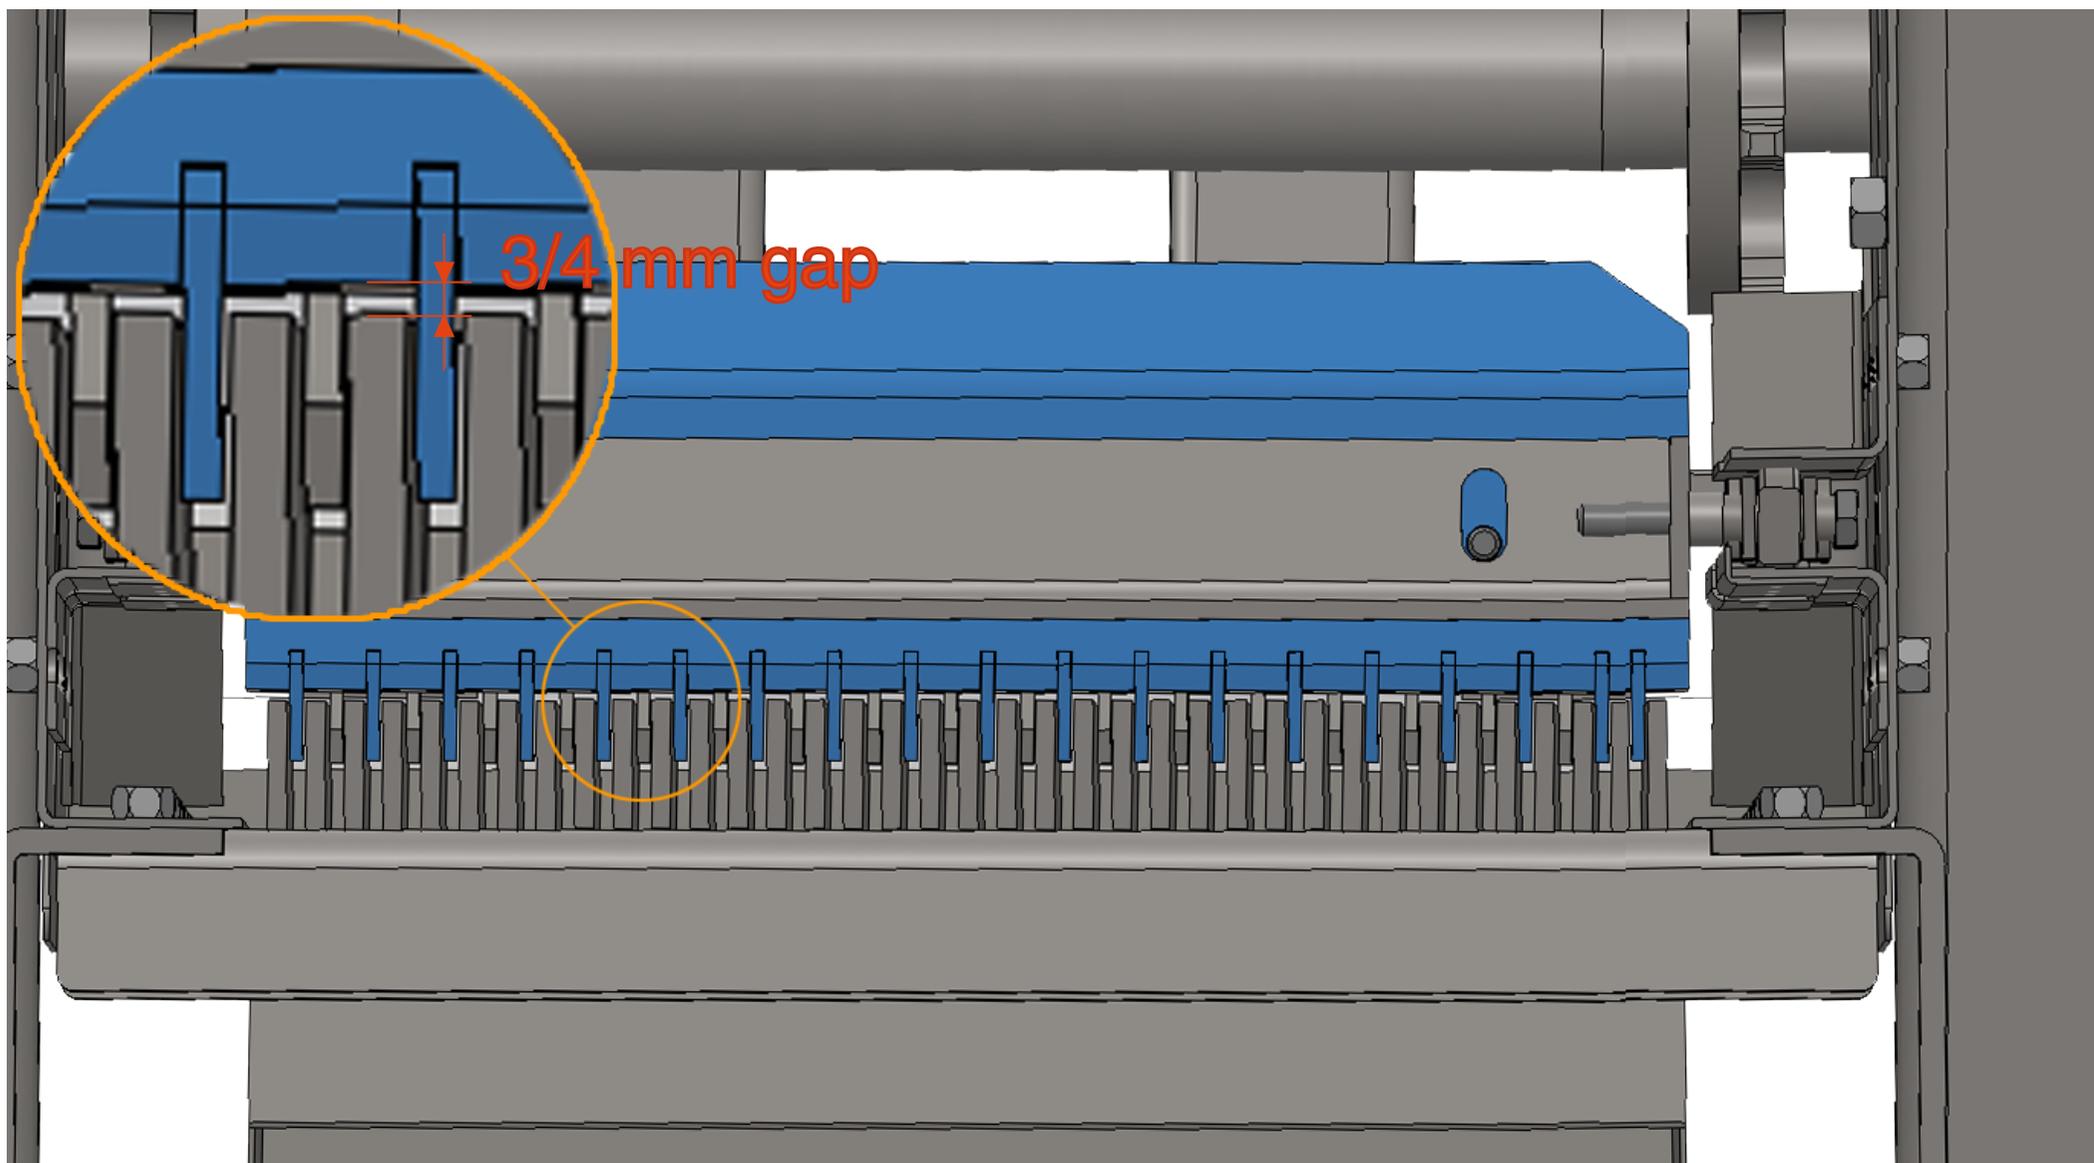


11 Then following the reverse procedure reassemble the machine and reposition it.


a

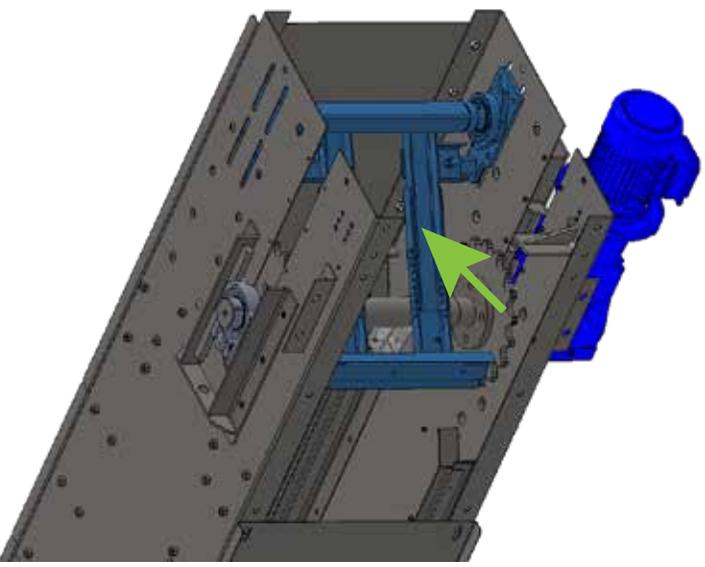


b

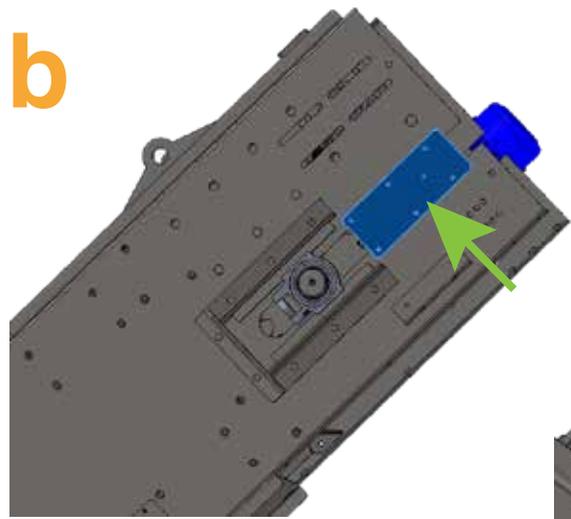


c

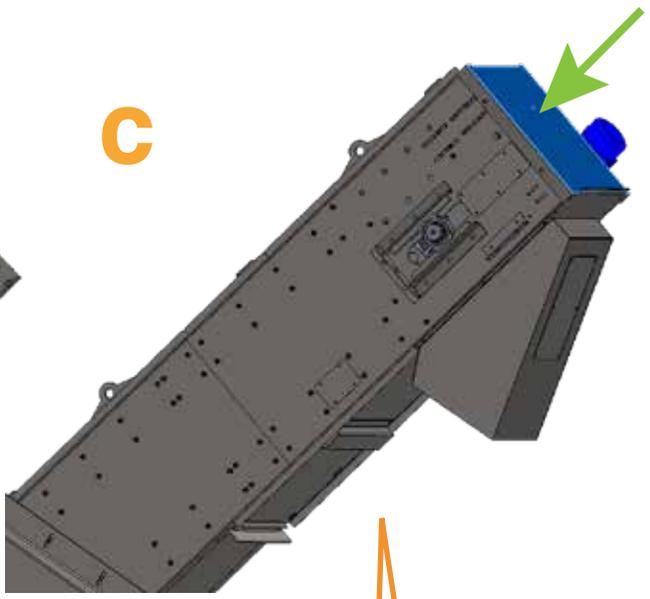

d

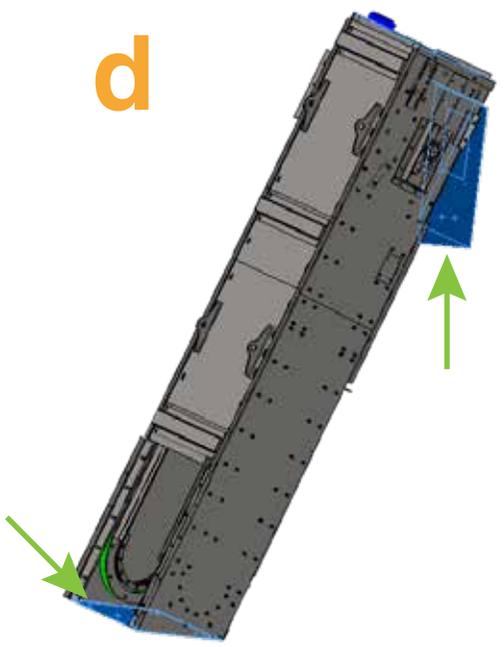

e

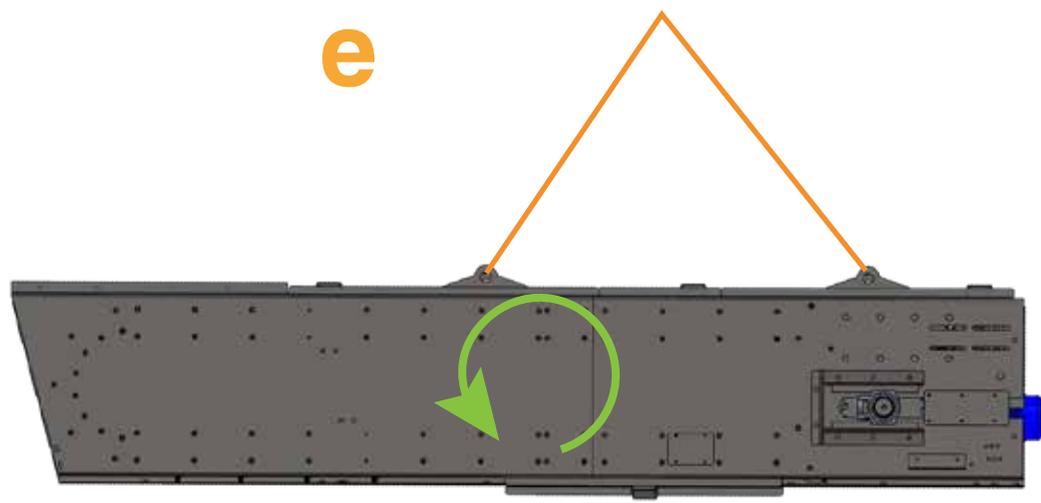

f

