



1

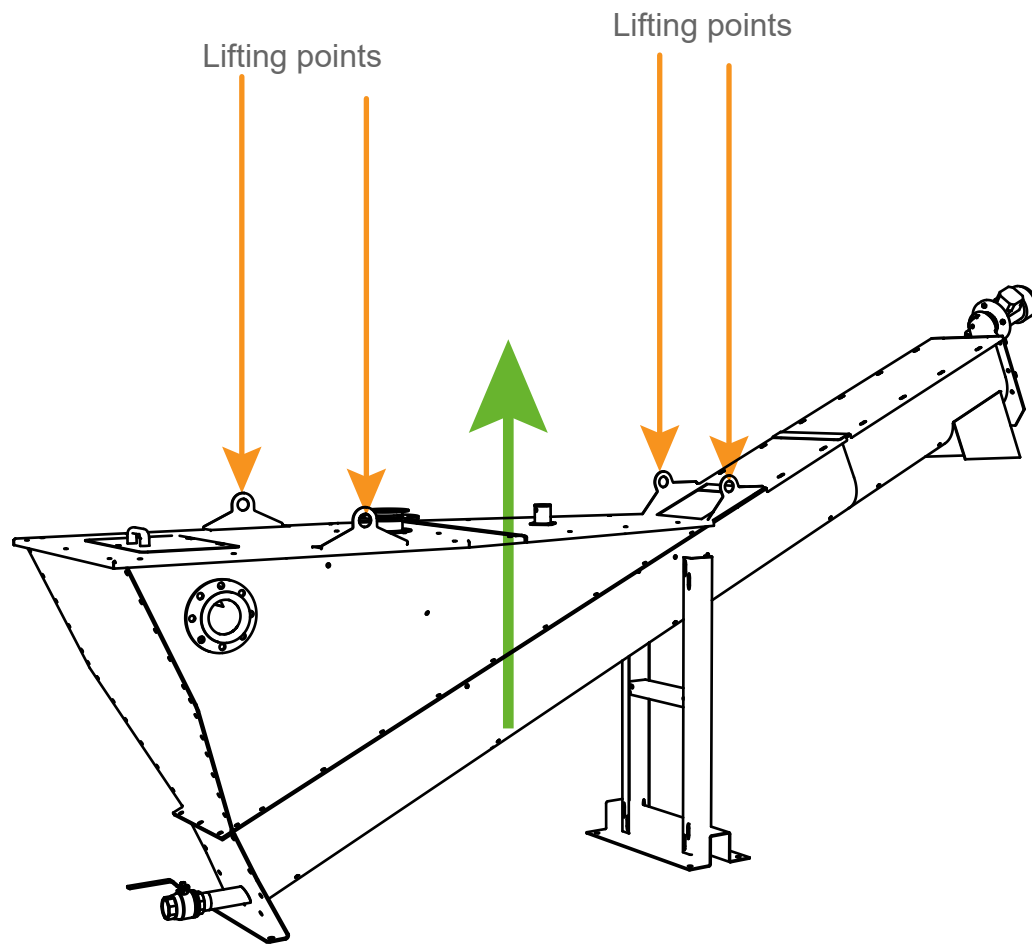


Lift up CDS unit connecting crane hooks to the 4 lifting points

2

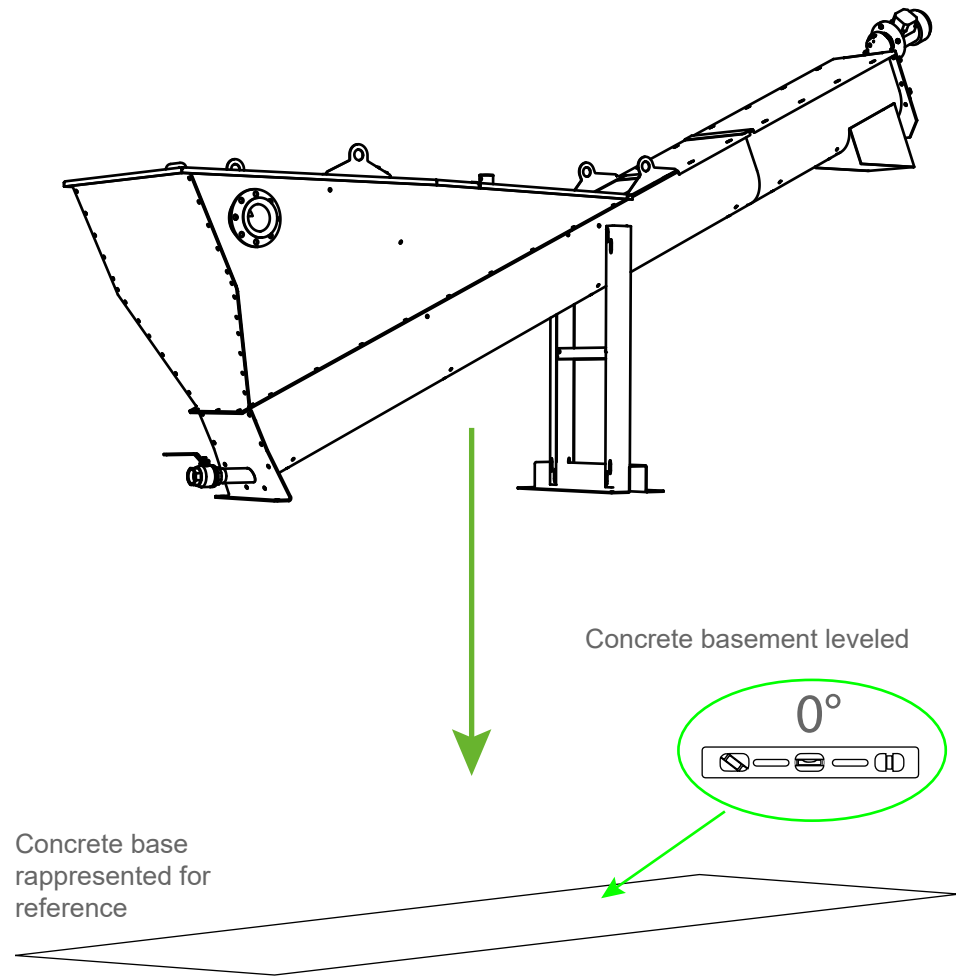


Locate the CDS on the concrete basement

3


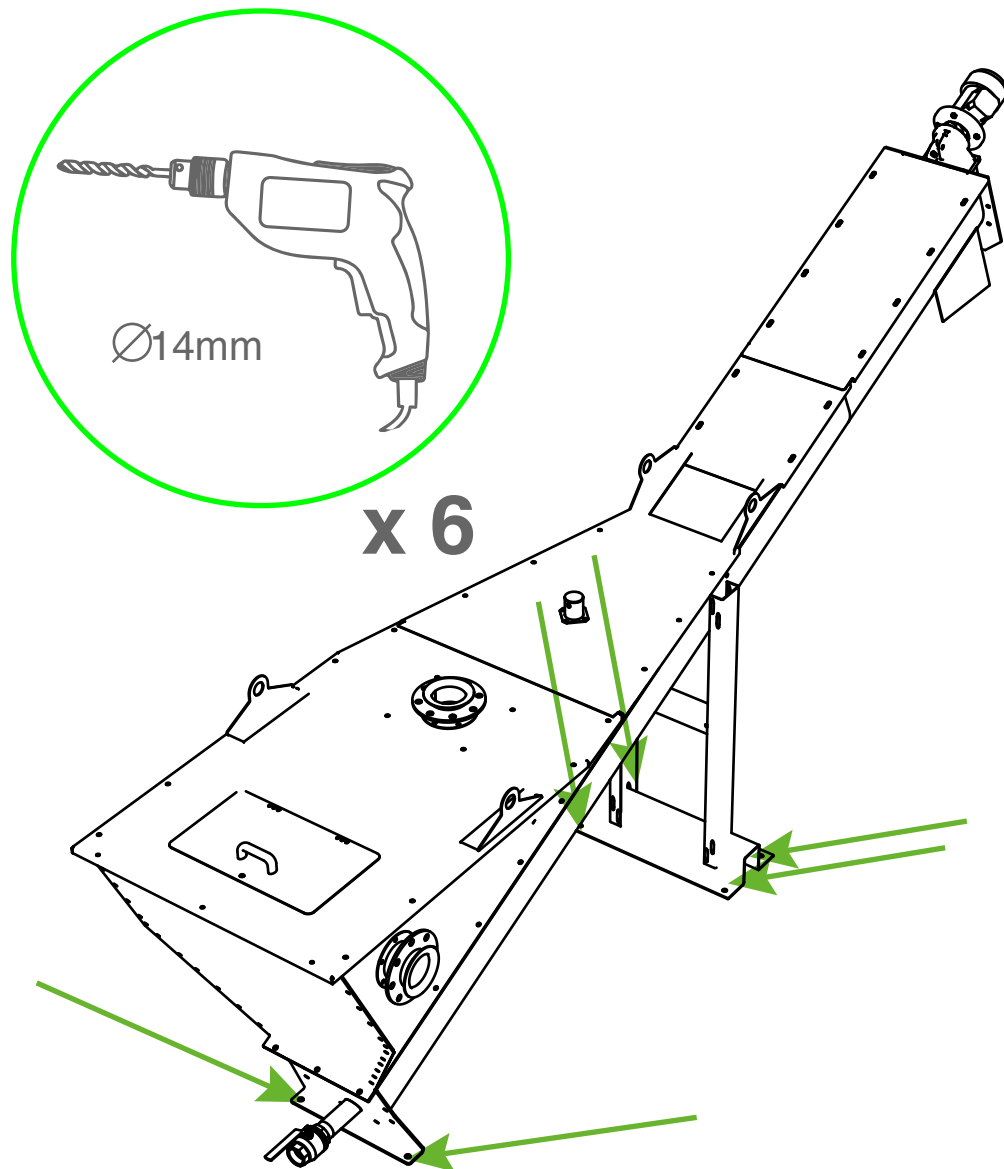


CDS's feet has a total of 6 holes for block it to the floor. 2 located in the front bracket and 4 in the back stand (see the image here above). Drill each hole

4

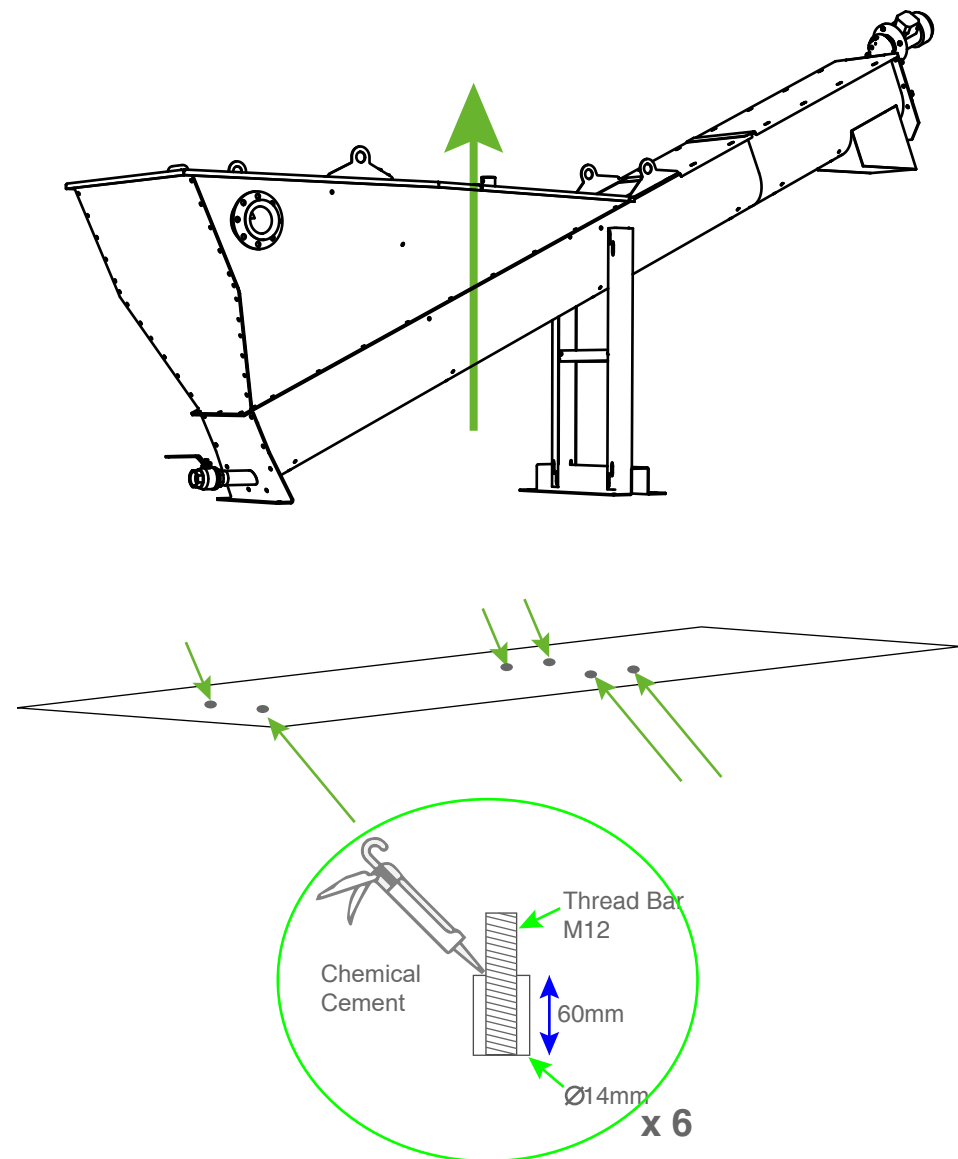

Remove CDS and place thread bars through each hole drilled. With chemical cement block each bar

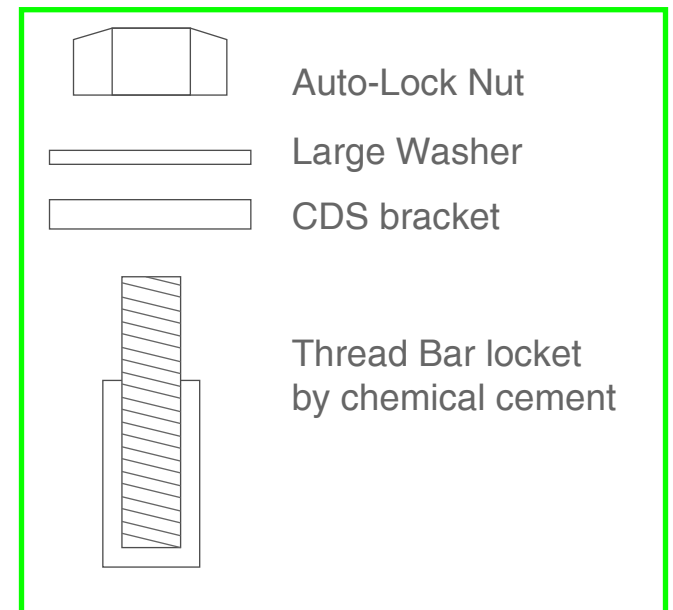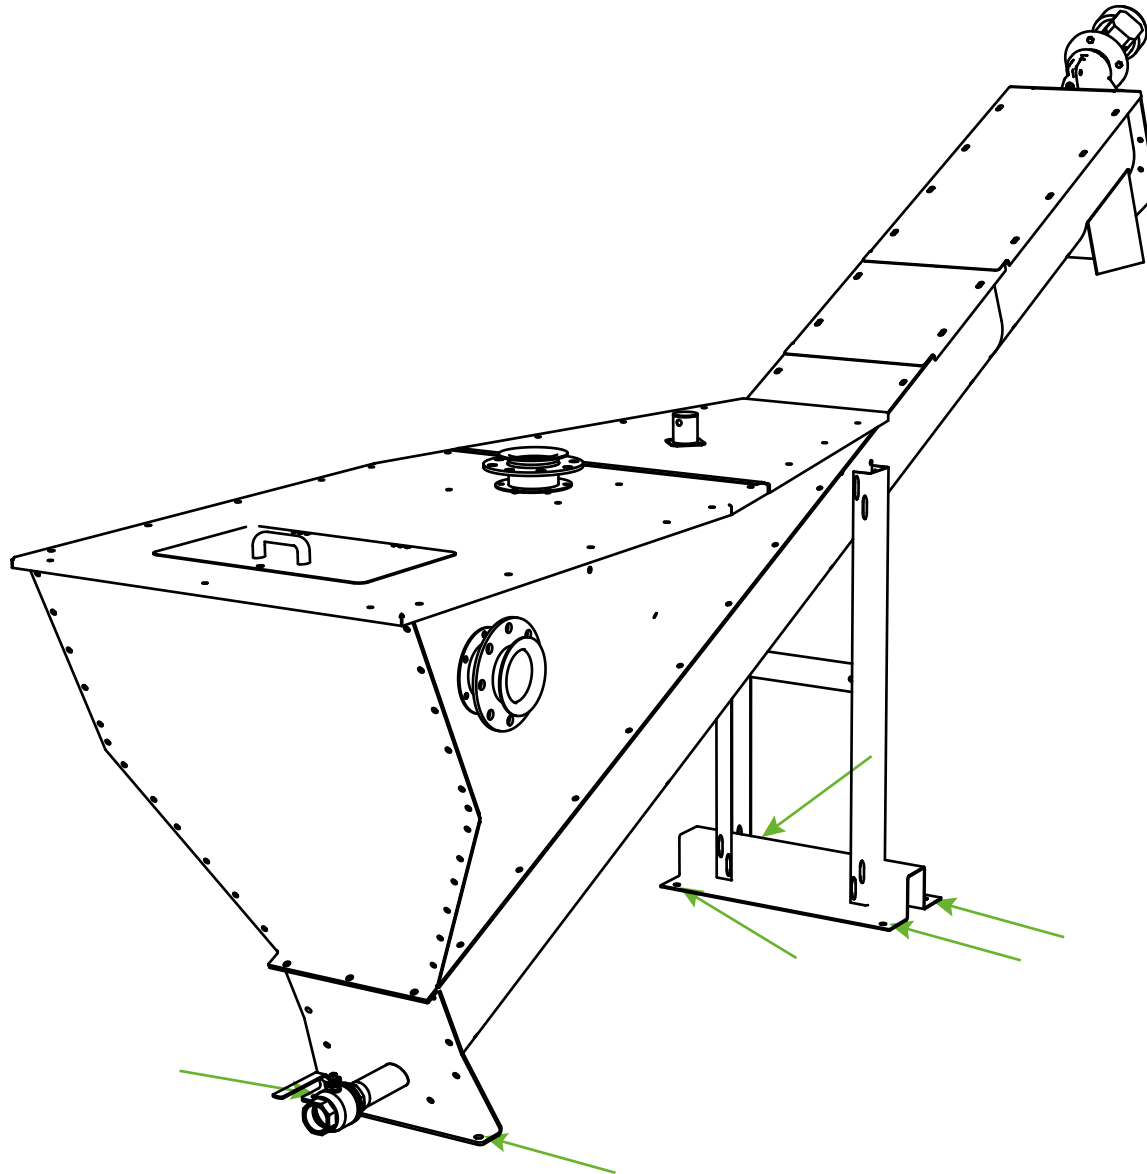

Place back the CDS matching each thread bar and following the scheme here on the right bolt them all.

Piping connections & discharging

