



On the top part of the equipment there are 2 eyelet, lift the Vortex from these.

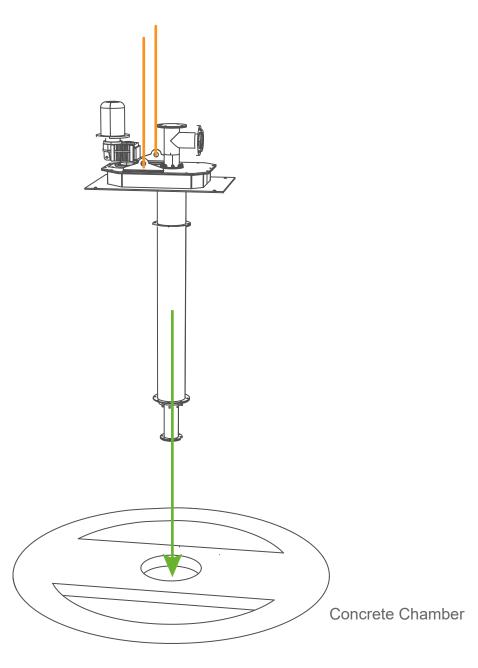


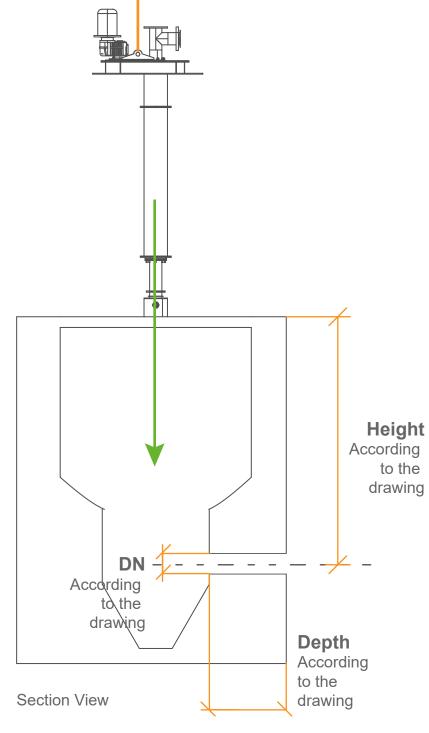


Place the VXGR trought the hole of the concrete chamber





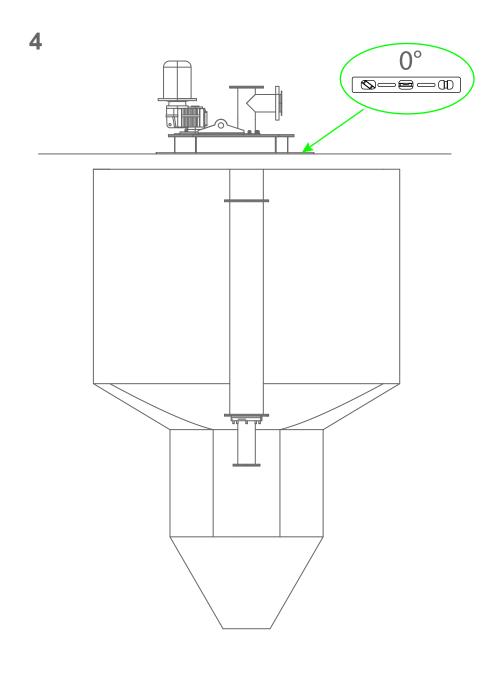




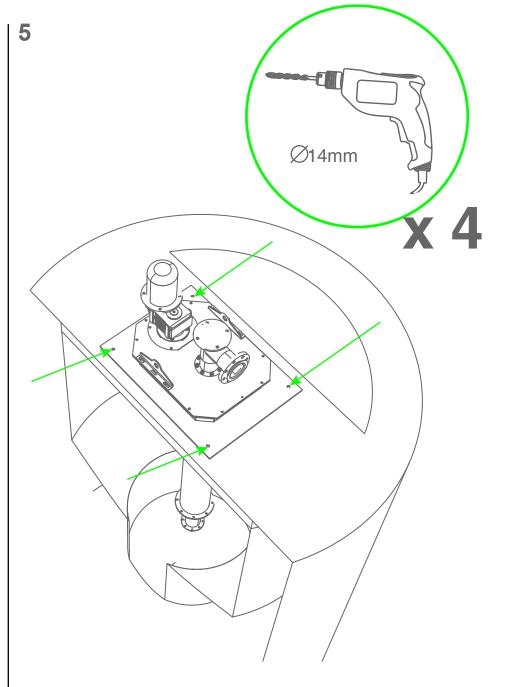


Place the VXGR trought the hole of the concrete chamber






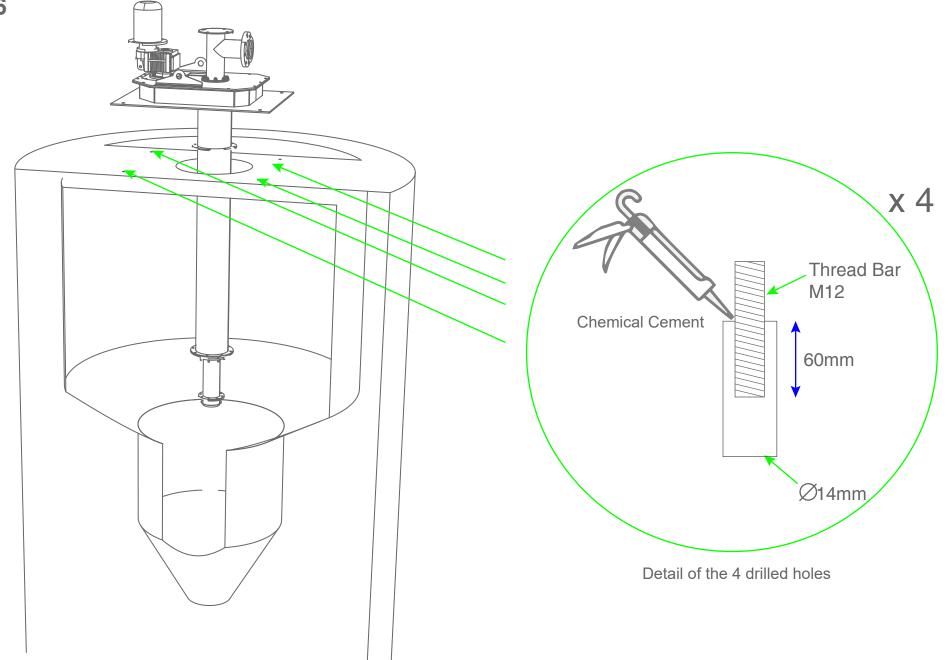




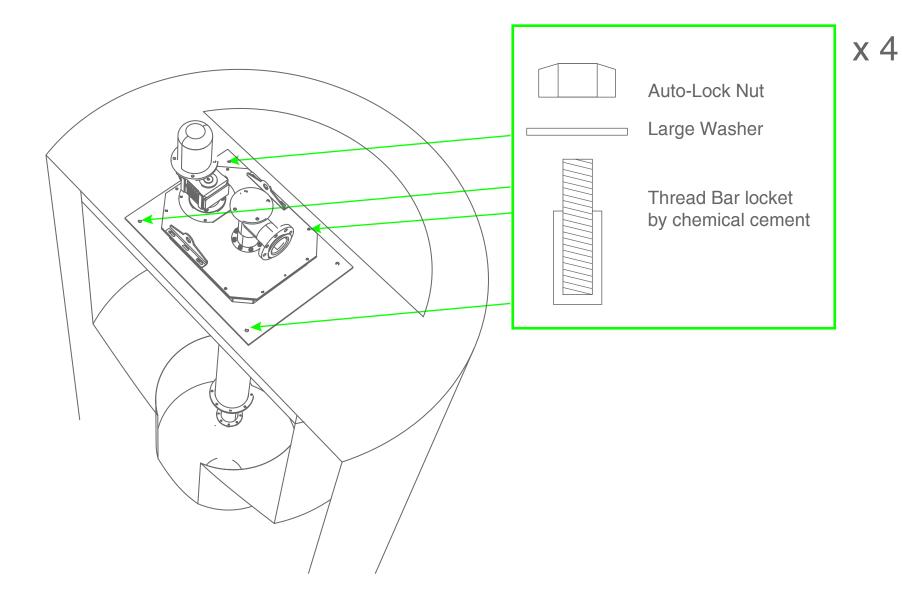



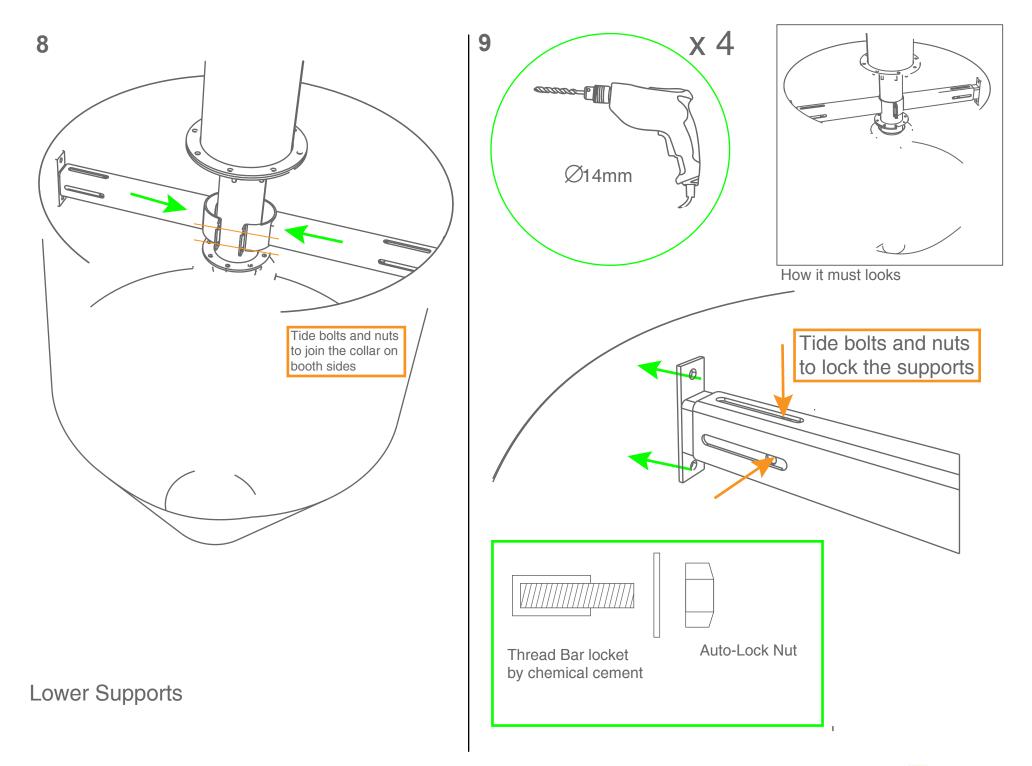



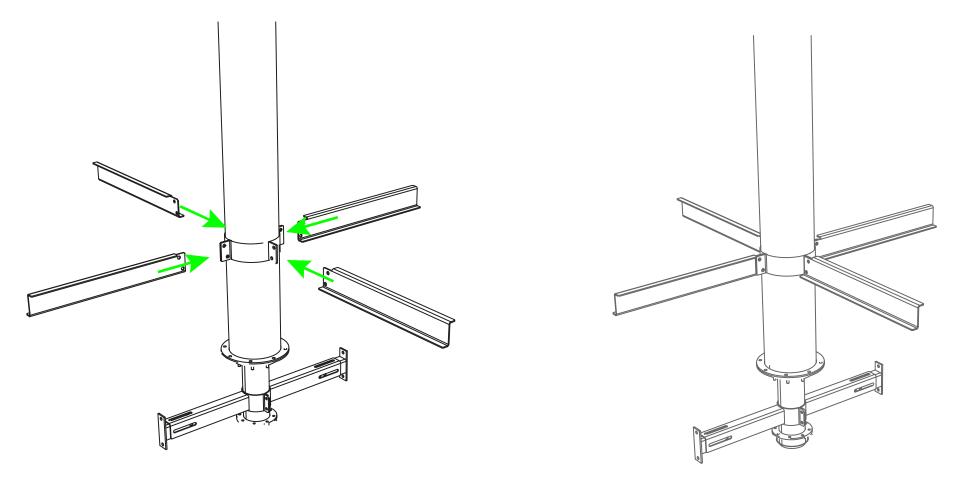

Paddles Installations Tide bolt and nuts for secure each paddle to the collar



